

Touch Panel Device driver setting manual

For Slackware 13.37 and 14.0-14.2 and 15.0

Prepare to Install

Slackware 14.x and 15.0

You need to edit /etc/inittab and set the default runlevel to 4,
then Added kdm to the top of /etc/profile.

1. Change the runlevel to 4 in /etc/inittab

```
# Default runlevel. (Do not set to 0 or 6)
```

```
id:4:initdefault:
```

2. Added kdm to the top of /etc/profile

```
# vi /etc/profile
```

```
kdm
```

Multiple display configuration

Set your display mode as desired using

System Settings->Display and Monitor -> Apply

Installation

Installing Drivers

1. Open terminal
2. Run the following commands to install the driver.

```
# sh setup.sh
```

```
# reboot
```

Uninstallation

1. Open terminal
2. Run the following commands to uninstall the driver.

```
# sh remove.sh
```

Touch Utility

Run touch utility method 1:

1. Clicking Launch Menu.
2. Type "touchtool" in the search box to search touch utility.
3. click on touchtool.

Run touch utility method 2

1. Open terminal
2. Run the following commands to start touch utility.

```
# Touchpack
```