

Touch Panel Device driver setting manual

For

SUSE 11 and SP1-SP4

SUSE 12 and SP1-SP4

SUSE 15 and SP1-SP2

Prepare to Install

Multiple display configuration

SUSE 11 ~ 12

Set your display mode as desired using

System Settings -> Displays -> Apply

SUSE 15

Set your display mode as desired using

Settings -> Devices -> Displays -> Apply

Installation

Installing Drivers on SUSE 11 ~ 12

1. Open terminal
2. Run the following commands to install the driver.

```
# su
```

```
# sh setup.sh
```

```
# reboot
```

Installing Drivers on SUSE 15

1. Open terminal
2. Run the following commands to install the driver.

```
# xhost si:localuser:root
```

```
# su
```

```
# sh setup.sh
```

```
# reboot
```

Uninstallation

1. Open terminal
2. Run the following commands to uninstall the driver.

```
# su
```

```
# sh remove.sh
```

Touch Utility

Run touch utility method 1

1. Open the Activities overview by clicking Activities at the top left of the screen,
or press Windows key on your keyboard to open Dash menu.
2. Then type touchtool.
3. From the results, click on touchtool.

Run touch utility method 2

1. Open terminal
2. Run the following commands to start touch utility.

```
# Touchpack
```