

# Touch Panel Device driver setting manual

## For Neokylin 5.x~7.x

### Prepare to Install

#### Multiple display configuration

Set your display mode as desired using

1. Clicking System at the menu bar.
2. On the expended System menu, point your mouse pointer to Preferences.
3. click on Display.

### Installation

1. Open terminal
2. Run the following commands to install the driver.

```
# sudo sh setup.sh
```

```
# reboot
```

### Uninstallation

1. Open terminal
2. Run the following commands to uninstall the driver.

```
# sudo sh remove.sh
```

# Touch Utility

## Run touch utility method 1

1. Clicking Start Menu.
2. Type "touchtool" in the search box to search touch utility.
3. click on touchtool.

## Run touch utility method 2

1. Open terminal
2. Run the following commands to start touch utility.

```
# Touchpack
```